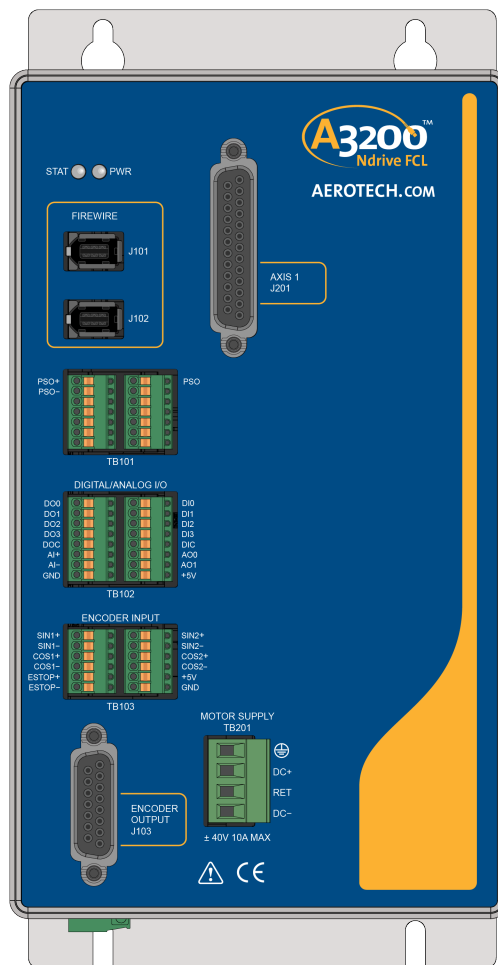


Ndrive FCL Hardware Manual

Revision: 1.02.00



Global Technical Support

Go to www.aerotech.com/global-technical-support for information and support about your Aerotech, Inc. products. The website supplies software, product manuals, Help files, training schedules, and PC-to-PC remote technical support. If necessary, you can complete Product Return (RMA) forms and get information about repairs and spare or replacement parts. To get help immediately, contact a service office or your sales representative. Include your customer order number in your email or have it available before you call.

United States (World Headquarters)	
Email: Support@aerotech.com Phone: +1-412-967-6440 Fax: +1-412-967-6870	101 Zeta Drive Pittsburgh, PA 15238-2811 www.aerotech.com
United Kingdom	Japan
Email: Support@aerotech.com Phone: +44 (0)1256 855055 Fax: +44 (0)1256 855649	Email: Support@aerotech.com Phone: +81 (0)50 5830 6814 Fax: +81 (0)43 306 3773
Germany	China
Email: Support@aerotech.com Phone: +49 (0)911 967 9370 Fax: +49 (0)911 967 93720	Email: Support@aerotech.com Phone: +86 (21) 5508 6731
France	Taiwan
Email: Support@aerotech.com Phone: +33 2 37 21 87 65	Email: Support@aerotech.com Phone: +886 (0)2 8751 6690

This manual contains proprietary information and may not be reproduced, disclosed, or used in whole or in part without the express written permission of Aerotech, Inc. Product names mentioned herein are used for identification purposes only and may be trademarks of their respective companies.

Copyright © 2012-2019, Aerotech, Inc., All rights reserved.

Aerotech Worldwide

United States ■ France ■ Germany ■ United Kingdom
China ■ Japan ■ Taiwan



Table of Contents

- Ndrive FCL Hardware Manual** **1**
 - Table of Contents 3
 - List of Figures 4
 - List of Tables 5
 - EU Declaration of Conformity 7
 - Agency Approvals 8
 - Safety Procedures and Warnings 9
 - Quick Installation Guide 11

- Chapter 1: Introduction** **13**
 - 1.1. Electrical Specifications 15
 - 1.2. Mechanical Design 16
 - 1.3. Environmental Specifications 17
 - 1.4. Drive and Software Compatibility 18

- Chapter 2: Installation and Configuration** **19**
 - 2.1. Communication Channel Settings 19
 - 2.2. Power Connections 20
 - 2.2.1. Control Supply Connections (TB104) 20
 - 2.2.2. Motor Supply Connections (TB201) 21
 - 2.2.3. External Power Supply Options 22
 - 2.2.4. Minimizing Conducted Radiated and System Noise 24
 - 2.3. FireWire Interface 25
 - 2.4. Motor and Feedback Connections (J201) 26
 - 2.4.1. Analog Encoder Inputs (J201) 27
 - 2.5. Position Synchronized Output (PSO) (TB101) 28
 - 2.6. Encoder Input (TB103 A/B) 29
 - 2.6.1. Emergency Stop Sense Input 31
 - 2.7. Encoder Output (J103) 32
 - 2.8. Digital and Analog I/O 34
 - 2.8.1. Digital Inputs (TB102 B) 35
 - 2.8.2. Digital Outputs (TB102 A) 37
 - 2.8.3. Differential Analog Input 39
 - 2.8.4. Analog Outputs (TB102 B) 40
 - 2.9. Laser Output Polarity 41
 - 2.10. PC Configuration and Operation Information 42

- Chapter 3: Maintenance** **43**
 - 3.1. Preventative Maintenance 44
 - 3.2. Board Assembly 45

- Appendix A: Warranty and Field Service** **47**

- Appendix B: Revision History** **49**

- Index** **51**

List of Figures

Figure 1-1: Ndrive FCL Controller 13

Figure 1-2: Functional Diagram 14

Figure 1-3: Dimensions 16

Figure 2-1: Control Supply Connections 20

Figure 2-2: Motor Bus Input Connections 21

Figure 2-3: Control and Motor Power Wiring using a TM3 Transformer 22

Figure 2-4: Third Party Power Supply Connection 23

Figure 2-5: Encoder Connections (TB103 A/B) 30

Figure 2-6: Emergency Stop Sense Input 31

Figure 2-7: Encoder Outputs 32

Figure 2-8: PSO External Sync Input 33

Figure 2-9: Inputs Connected to a Current Sourcing Device 36

Figure 2-10: Inputs Connected to a Current Sinking Device 36

Figure 2-11: Outputs Connected in Current Sourcing Mode 38

Figure 2-12: Outputs Connected in Current Sinking Mode 38

Figure 2-13: Analog Inputs (TB102) 39

Figure 2-14: Analog Outputs (TB102 B) 40

Figure 3-1: Control Board Assembly 45

Figure 3-2: Power Board Assembly 46

List of Tables

Table 1-1:	Feature Summary	13
Table 1-2:	Electrical Specifications	15
Table 1-3:	Unit Weight	16
Table 1-4:	Drive and Software Compatibility	18
Table 2-1:	Device Number Switch Settings (S2)	19
Table 2-2:	Control Supply Input Wiring (TB104)	20
Table 2-3:	3-Pin Terminal Block Mating Connector Specifications for TB104	20
Table 2-4:	Motor Supply Input Wiring (TB201)	21
Table 2-5:	4-Pin Terminal Block Mating Connector Specifications for TB201	21
Table 2-6:	FireWire Card Part Numbers	25
Table 2-7:	FireWire Repeaters (for cables exceeding 4.5 m (15 ft) specification)	25
Table 2-8:	FireWire Cables (copper and glass fiber)	25
Table 2-9:	Motor and Feedback Connector Pinout (J201)	26
Table 2-10:	25-Pin D-Style Mating Connector Specifications for J201	26
Table 2-11:	Analog Encoder Specifications	27
Table 2-12:	PSO Specifications	28
Table 2-13:	PSO Pins on the TB101 A Connector	28
Table 2-14:	PSO Pins on the TB101 B Connector	28
Table 2-15:	Encoder Input Specifications (TB103)	29
Table 2-16:	Encoder Input Connector Pinout (TB103 A)	29
Table 2-17:	Encoder Input Connector Pinout (TB103 B)	29
Table 2-18:	6-Pin Terminal Block Mating Connector Specifications for TB103 A/B	29
Table 2-19:	Cable Part Numbers	29
Table 2-20:	ESTOP Pins on the Encoder Input TB103 A Connector	31
Table 2-21:	Electrical Noise Suppression Devices	31
Table 2-22:	Encoder Output Connector Pinout (J103)	32
Table 2-23:	15-Pin D-Style Mating Connector Specifications for J103	32
Table 2-24:	PSO External Sync Specifications	33
Table 2-25:	Digital Outputs and Differential Analog Inputs Pinout (TB102 A)	34
Table 2-26:	Digital Inputs and Analog Outputs Pinout (TB102 B)	34
Table 2-27:	8-Pin Terminal Block Mating Connector Specifications for TB102 A/B	34
Table 2-28:	Digital Input Specifications	35
Table 2-29:	Digital Inputs Pins on the TB102 B Connector	35
Table 2-30:	Digital Output Pins on the TB102 A Connector	37
Table 2-31:	Digital Output Specifications	37
Table 2-32:	Analog Input Pins on the TB102 A Connector	39
Table 2-33:	Differential Analog Input Specifications	39
Table 2-34:	Analog Output Pins on the TB102 B Connector	40
Table 2-35:	Analog Output Specifications	40
Table 3-1:	LED Description	43
Table 3-2:	Preventative Maintenance	44
Table 3-3:	Control Board Fuse Specifications	45
Table 3-4:	Power Board Fuses	46

This page intentionally left blank.

EU Declaration of Conformity

Manufacturer Aerotech, Inc.
Address 101 Zeta Drive
 Pittsburgh, PA 15238-2811
 USA
Product Ndrive FCL
Model/Types All


This is to certify that the aforementioned product is in accordance with the applicable requirements of the following Directive(s):

2014/35/EU	Low Voltage Directive
2011/65/EU	RoHS 2 Directive

and has been designed to be in conformity with the applicable requirements of the following Standard(s) when installed and used in accordance with the manufacturer’s supplied installation instructions.

EN 61010-1:2010	Safety Requirements for Electrical Equipment
-----------------	--

Authorized Representative: Simon Smith, European Director
Address: Aerotech Ltd
 The Old Brick Kiln, Ramsdell, Tadley
 Hampshire RG26 5PR
 UK

Name  / Alex Weibel
Position Engineer Verifying Compliance
Location Pittsburgh, PA
Date 3/26/2019



Agency Approvals

Aerotech, Inc. Model Ndrive FCL drives have been tested and found to be in accordance to the following listed Agency Approvals:

Approval / Certification:	CUS NRTL
Approving Agency:	TUV SUD America Inc.
Certificate #:	U8 16 06 68995 021
Standards:	UL 61010-1:2012; CAN/CSA-C22.2 No. 61010-1:2012; EN 61010-1:2010

Visit <https://www.tuev-sued.de/product-testing/certificates> to view Aerotech's TÜV SÜD certificates. Type the certificate number listed above in the search bar or type "Aerotech" for a list of all Aerotech certificates.

Safety Procedures and Warnings

This manual tells you how to carefully and correctly use and operate the Ndrive FCL. Read all parts of this manual before you install or operate the Ndrive FCL or before you do maintenance to your system. To prevent injury to you and damage to the equipment, obey the precautions in this manual. The precautions that follow apply when you see a Danger or Warning symbol in this manual. If you do not obey these precautions, injury to you or damage to the equipment can occur. If you do not understand the information in this manual, contact Aerotech Global Technical Support

This product has been designed for light industrial manufacturing or laboratory environments. The protection provided by the equipment could be impaired if the product is used in a manner not specified by the manufacturer.

NOTE: Aerotech continually improves its product offerings; listed options may be superseded at any time. All drawings and illustrations are for reference only and were complete and accurate as of this manual's release. Refer to www.aerotech.com for the most up-to-date information.



DANGER: This product contains potentially lethal voltages. To reduce the possibility of electrical shock, bodily injury, or death the following precautions must be followed.

1. Disconnect electrical power before servicing equipment.
2. Disconnect electrical power before performing any wiring.
3. To minimize the possibility of electrical shock and bodily injury, extreme care must be exercised when any electrical circuits are in use. Suitable precautions and protection must be provided to warn and prevent persons from making contact with live circuits.
4. Do not connect or disconnect any electrical components or connecting cables while connected to a power source.
5. All components must be properly grounded in accordance with local electrical safety requirements.
6. Operator safeguarding requirements must be addressed during final integration of the product.



WARNING: To minimize the possibility of electrical shock, bodily injury or death the following precautions must be followed.

1. If the product is used in a manner not specified by the manufacturer, the protection provided by the product can be impaired and result in damage, shock, injury, or death.
2. Moving parts can cause crushing or shearing injuries. Access to all stage and motor parts must be restricted while connected to a power source.
3. Cables can pose a tripping hazard. Securely mount and position all system cables to avoid potential hazards.
4. Do not expose this product to environments or conditions outside of the listed specifications. Exceeding environmental or operating specifications can cause damage to the equipment.
5. Operators must be trained before operating this equipment.
6. All service and maintenance must be performed by qualified personnel.

This page intentionally left blank.

Quick Installation Guide

This chapter describes the order in which connections and settings should typically be made to the Ndrive FCL. If a custom interconnection drawing was created for your system (look for a line item on your Sales Order under the heading “Integration”), that drawing can be found on your installation device.

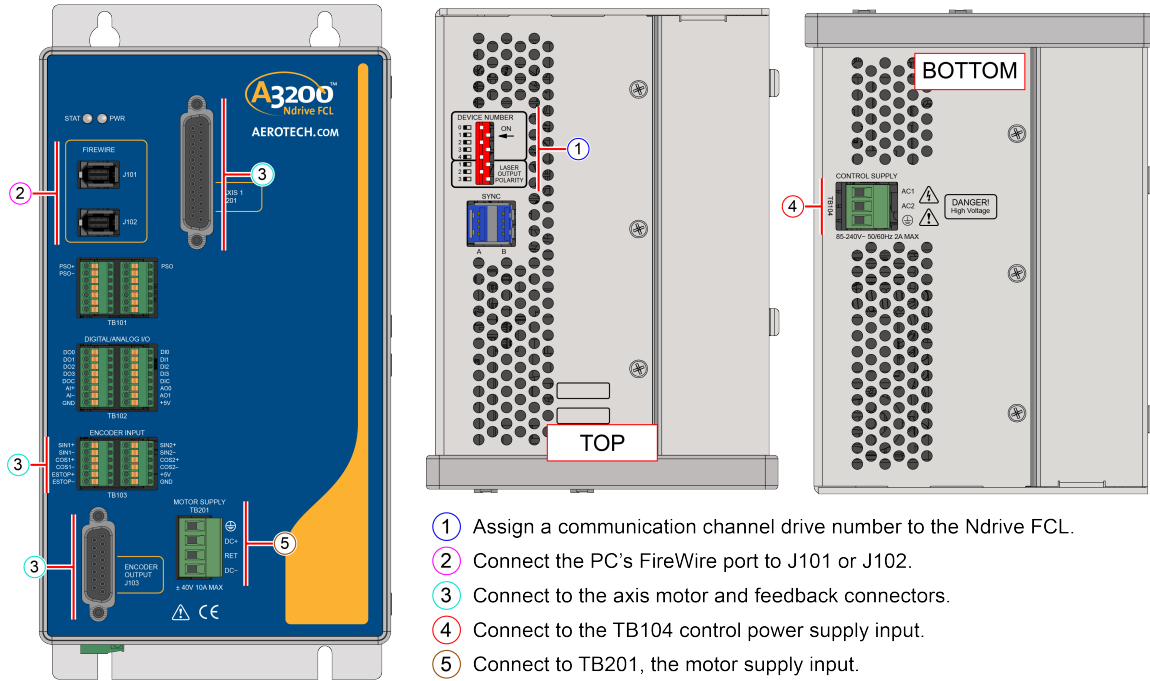


Figure 1: Quick Start Connections

Quick Start Summary

Topic	Section
Set the Device Number	Section 2.1. Communication Channel Settings
Connect the FireWire	Section 2.3. FireWire Interface
Connect to the axis motor and feedback	Section 2.6. Encoder Input (TB103 A/B) , Section 2.7. Encoder Output (J103) , and Section 2.4. Motor and Feedback Connections (J201)
Connect to the Control Supply	Section 2.2.1. Control Supply Connections (TB104)
Connect to the Motor Supply	Section 2.2.2. Motor Supply Connections (TB201)

This page intentionally left blank.

Chapter 1: Introduction

Aerotech's Ndrive FCL (Fast Linear Servo) network digital drive is a high-performance linear amplifier designed to eliminate the non-linearities common with PWM amplifiers. The drive provides deterministic behavior, auto-identification, and easy software setup. The Ndrive FCL's high performance double precision floating point DSP controls the digital PID and current loops. All system configuration is done using software-settable parameters, including control loop gains and system safety functions.

The Ndrive FCL has an encoder interpolation feature, dedicated analog and digital I/O, and separate power connections for motor and control supply voltages

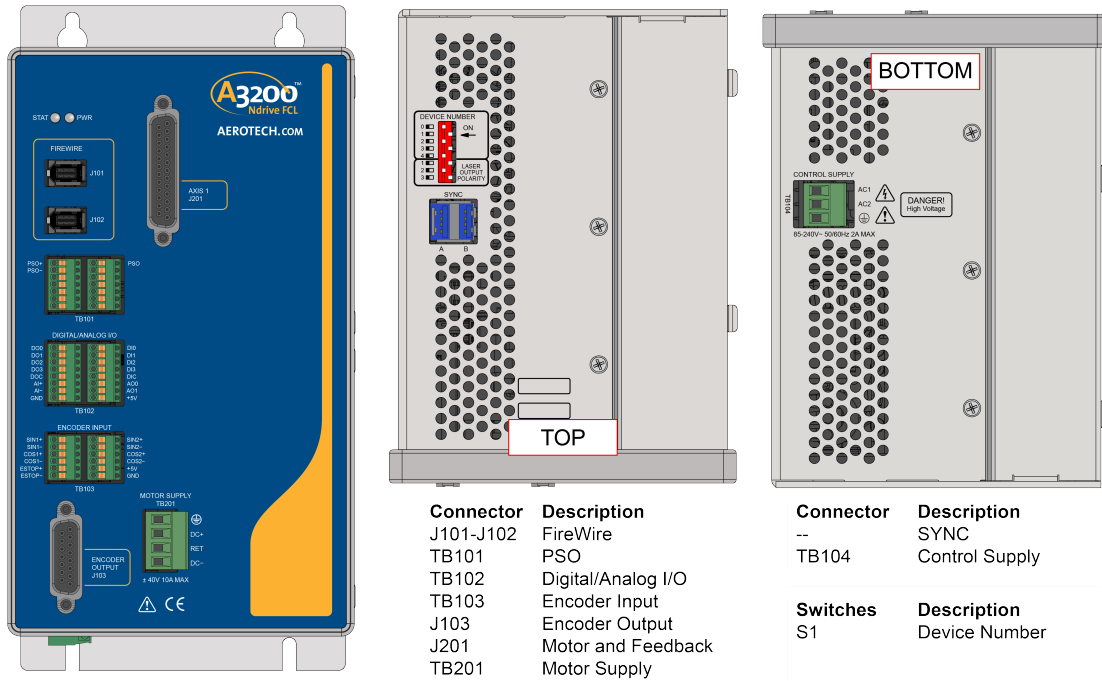


Figure 1-1: Ndrive FCL Controller

Connector	Description	Connector	Description
J101-J102	FireWire	--	SYNC
TB101	PSO	TB104	Control Supply
TB102	Digital/Analog I/O		
TB103	Encoder Input	Switches	Description
J103	Encoder Output	S1	Device Number
J201	Motor and Feedback		
TB201	Motor Supply		

Table 1-1: Feature Summary

Standard Features
<ul style="list-style-type: none"> • Two auxiliary channels of 40 MHz line driver quadrature encoder inputs. • Four optically-isolated digital inputs; 5-24V • Four optically-isolated digital outputs sinking or sourcing; 5-24V • Dual-Axis PSO firing • Three-axis Part-Speed PSO firing that uses the PSO firing circuit based off the commanded vector velocity of three or more axes • One 16-bit differential analog input • Two 16-bit analog outputs • One optically-isolated digital output • One TTL output • Two FireWire ports • Dedicated 5-24V Emergency Stop sense input • Internal power supply • 5 VDC, 500 mA user output power for encoder

The following block diagram shows a connection summary (refer to Chapter 2 and Chapter 3 for more detailed connection information).

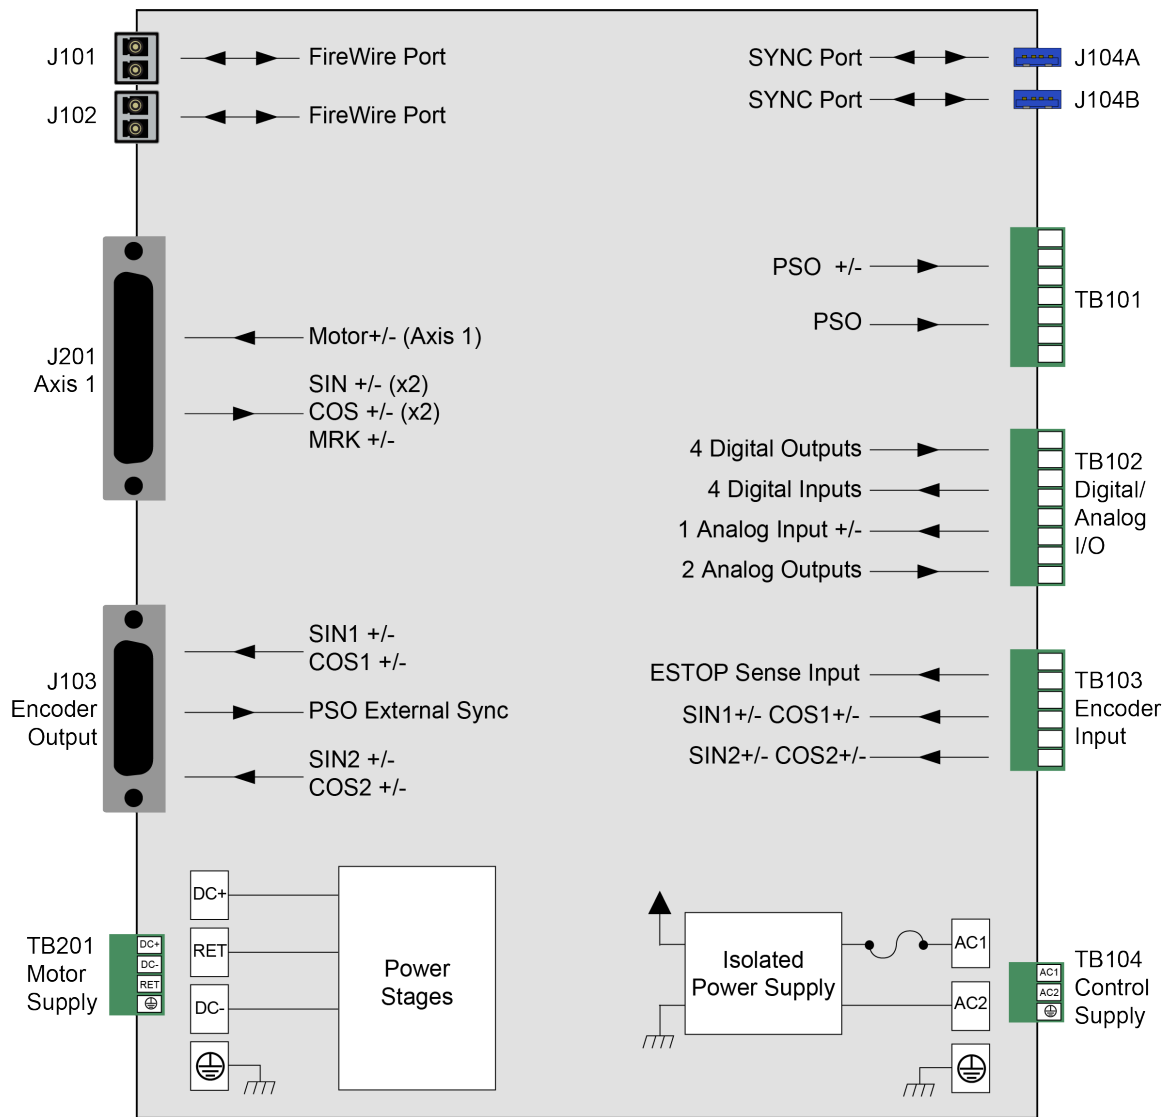


Figure 1-2: Functional Diagram

1.1. Electrical Specifications

The electrical specifications for the Ndrive FCL are listed below.

Table 1-2: Electrical Specifications

Description		Ndrive FCL
Motor Supply	Input Voltage	± 40 VDC (max)
	Input Current (continuous)	10 A
Control Supply	Input Voltage	85-240 VAC
	Input Frequency	50-60 Hz
	Inrush Current	16 A
	Input Current	0.35 A (max)
Output Voltage		76 V
Peak Output Current		20 A
Continuous Output Current		5 A
Minimum Load Resistance		0.5 Ω
User Power Supply Output		5 VDC (@ 500 mA)

1.2. Mechanical Design

The following figure shows the Ndrive FCL package dimension as well as the typical mounting orientation. Refer to [Section 2.3](#) for FireWire interconnection cable options.

Table 1-3: Unit Weight

Weight
2.9 kg [6.4 lb]

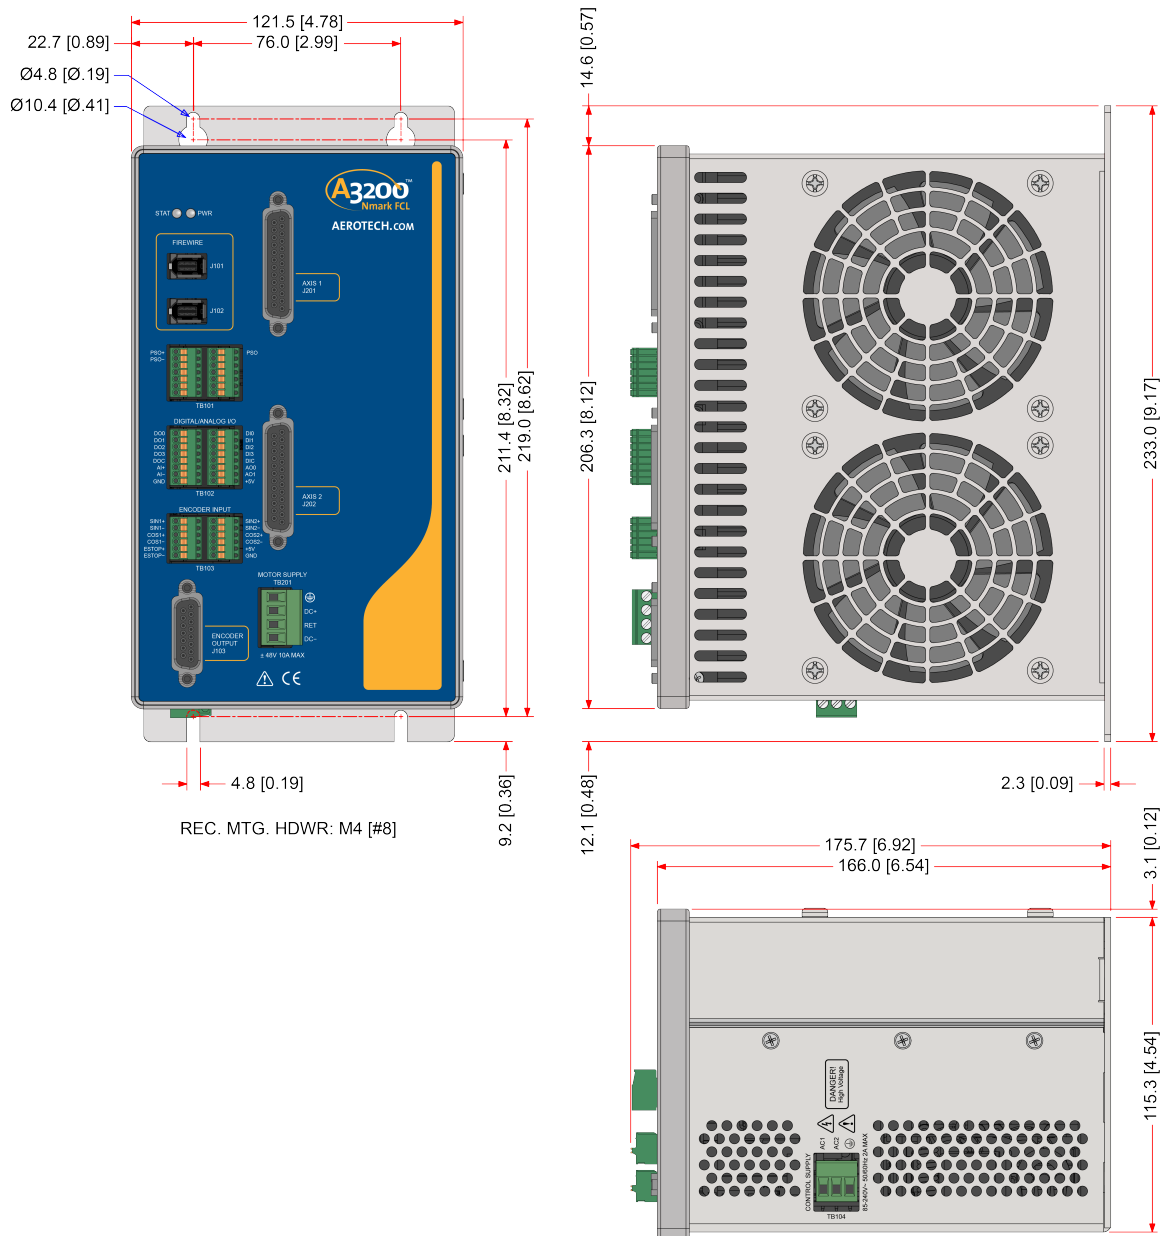


Figure 1-3: Dimensions

1.3. Environmental Specifications

The environmental specifications for the Ndrive FCL are listed below.

Ambient Temperature	Operating: 0° to 50°C (32° to 122° F)
	Storage: -30° to 85°C (-22° to 185° F)
Humidity	Maximum relative humidity is 80% for temperatures up to 31°C. Decreasing linearly to 50% relative humidity at 40°C. Non condensing.
Altitude	Operating: 0 m to 2,000 m (0 ft to 6,562 ft) above sea level Contact Aerotech if your specific application involves use above 2,000 m or below sea level.
Pollution	Pollution degree 2 (normally only non-conductive pollution).
Use	Indoor use only.

1.4. Drive and Software Compatibility

The following table lists the available drives and which version of the software first supported the drive. Drives that list a specific version number in the **Last Software Version** column will not be supported after the listed version.

Table 1-4: Drive and Software Compatibility

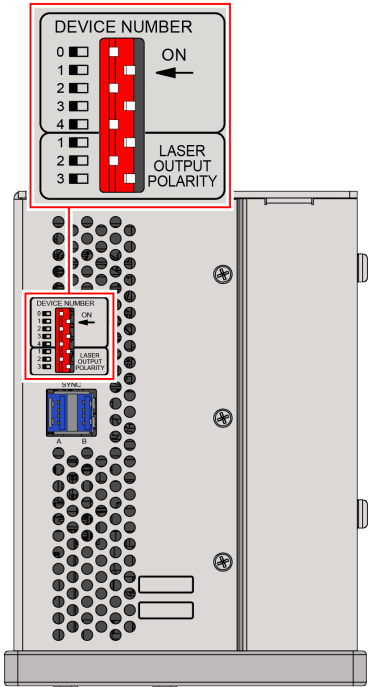
Drive Type	Firmware Revision	First Software Version	Last Software Version
Ndrive FCL	-	6.01	Current
	A	6.02	Current

Chapter 2: Installation and Configuration

2.1. Communication Channel Settings

Use the Device Number switches to assign a communication channel number to the Ndrive FCL. If you are using multiple drives, each drive must be assigned a unique communication channel. Multiple drives are typically configured using sequential communication channels.

Table 2-1: Device Number Switch Settings (S2)

Device #	Switch Settings (Off is indicated by "-")					Switch Location
	4	3	2	1	0	
1	ON	ON	ON	ON	ON	
2	ON	ON	ON	ON	-	
3	ON	ON	ON	-	ON	
4	ON	ON	ON	-	-	
5	ON	ON	-	ON	ON	
6	ON	ON	-	ON	-	
7	ON	ON	-	-	ON	
8	ON	ON	-	-	-	
9	ON	-	ON	ON	ON	
10	ON	-	ON	ON	-	
11	ON	-	ON	-	ON	
12	ON	-	ON	-	-	
13	ON	-	-	ON	ON	
14	ON	-	-	ON	-	
15	ON	-	-	-	ON	
16	ON	-	-	-	-	
17	-	ON	ON	ON	ON	
18	-	ON	ON	ON	-	
19	-	ON	ON	-	ON	
20	-	ON	ON	-	-	
21	-	ON	-	ON	ON	
22	-	ON	-	ON	-	
23	-	ON	-	-	ON	
24	-	ON	-	-	-	
25	-	-	ON	ON	ON	
26	-	-	ON	ON	-	
27	-	-	ON	-	ON	
28	-	-	ON	-	-	
29	-	-	-	ON	ON	
30	-	-	-	ON	-	
31	-	-	-	-	ON	
32	-	-	-	-	-	

2.2. Power Connections

The Ndrive FCL has two input power connectors; one for control power (AC) and a second for motor power (DC). For a complete list of electrical specifications, refer to [Section 1.1. Electrical Specifications](#).

2.2.1. Control Supply Connections (TB104)

NOTE: This product requires two power supply connections. The Motor Supply and Control Supply must both be connected for proper operation.

The control power supply input supplies power to the Ndrive FCL's communications and logic circuitry. Both AC1 and AC2 inputs are fused internally.

The control power supply contains an internal filter and does not require an external filter for CE compliance.

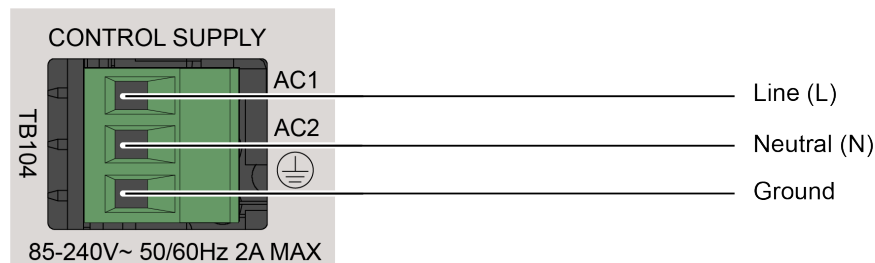


Figure 2-1: Control Supply Connections

Table 2-2: Control Supply Input Wiring (TB104)

Pin	Description	Recommended Wire Size
AC1	Line: 85 - 240 Volt AC Input Range	1.3 mm ² (#16 AWG)
AC2	Neutral (0V) or 85 - 240 Volt AC Input Range	1.3 mm ² (#16 AWG)
	Protective Ground (Required for Safety)	1.3 mm ² (#16 AWG)

NOTE: Wire insulation rated for 300 V.

Table 2-3: 3-Pin Terminal Block Mating Connector Specifications for TB104

Type	Aerotech P/N	Phoenix P/N	Screw Torque Value: Nm	Wire Size: mm ² [AWG]
3-Pin Terminal Block	ECK00213	1754465	0.5 - 0.6	3.3 - 0.516 [12-30]

2.2.2. Motor Supply Connections (TB201)

NOTE: This product requires two power supply connections. The Motor Supply and Control Supply must both be connected for proper operation.

Motor power is applied to the Ndrive FCL at the four terminals of the Motor Supply connector (TB201). The DC+ and DC- inputs are internally fused.



WARNING: Do not operate the Ndrive FCL without the safety ground connection in place.

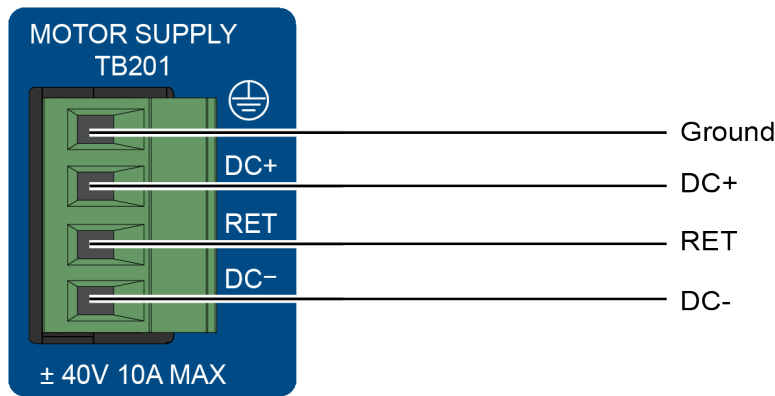



Figure 2-2: Motor Bus Input Connections

Table 2-4: Motor Supply Input Wiring (TB201)

Pin	Description	Recommended Wire Size
DC+	0 to +40 Volt DC Input Range	2.1 mm ² (#14 AWG)
RET	Return for DC Input	2.1 mm ² (#14 AWG)
DC-	0 to -40 Volt DC Input Range	2.1 mm ² (#14 AWG)
	Protective Ground (Required for Safety)	2.1 mm ² (#14 AWG)

NOTE: Wire insulation rated for 300 V.

Table 2-5: 4-Pin Terminal Block Mating Connector Specifications for TB201

Type	Aerotech P/N	Phoenix P/N	Screw Torque Value: Nm	Wire Size: mm ² [AWG]
4-Pin Terminal Block	ECK01581	1757035	0.5 - 0.6	3.3 - 0.0516 [12-30]

2.2.3. External Power Supply Options

The Ndrive FCL requires a bipolar power supply for the motor supply connector TB201. A TM3 can be used to power up to 4 drives as shown in Figure 2-3. Alternatively, two power supplies can be used as long as their output is not ground referenced and are specified to be used in either positive or negative polarity (refer to Figure 2-4). The Ndrive FCL controller is capable of sourcing 10 A peak to each motor. This current must be supplied by the external power supply. Switching power supplies must be rated for the peak current requirement of the application since they will typically shut down if overloaded.

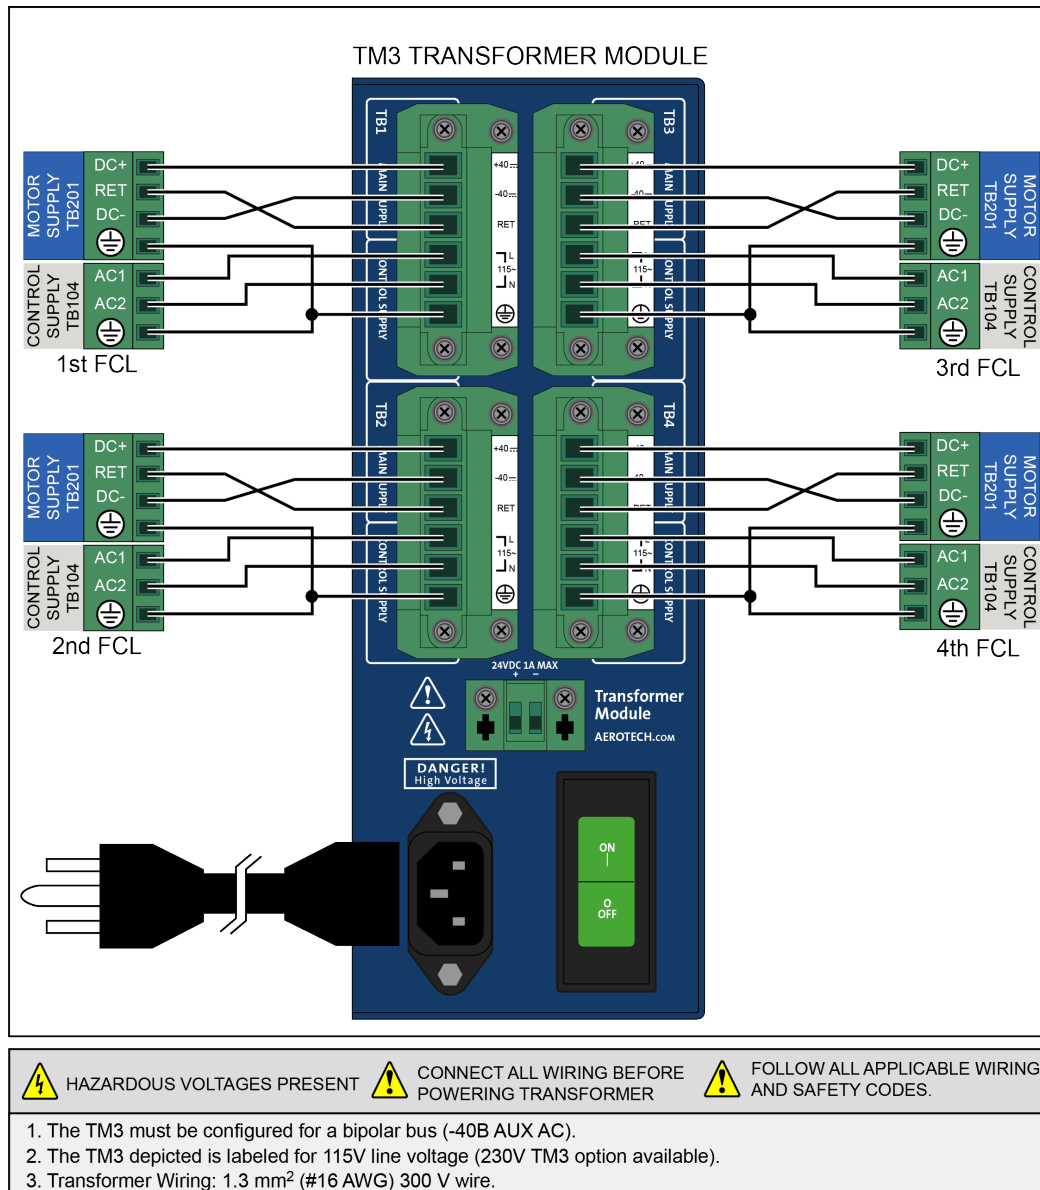


Figure 2-3: Control and Motor Power Wiring using a TM3 Transformer

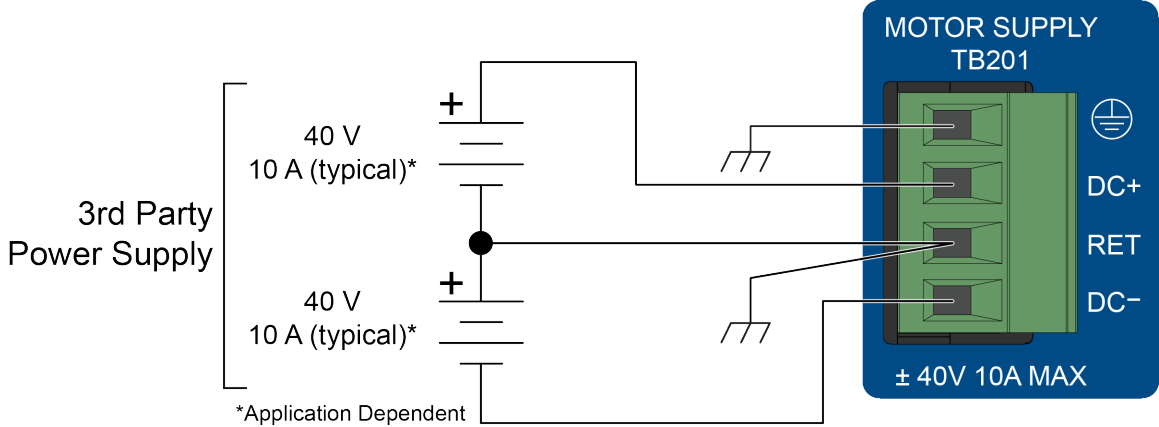


Figure 2-4: Third Party Power Supply Connection

2.2.4. Minimizing Conducted Radiated and System Noise

User connections to the product must be made using shielded cables with metal D-style connectors and back shells. The shield of the cables must be connected to the metal back shell in order for the product to conform to radiated emission standards.

The Ndrive FCL is a component designed to be integrated with other electronics. EMC testing must be conducted on the final product configuration.

2.3. FireWire Interface

The FireWire bus is the high-speed communications connection to the Ndrive FCL operating at 400 megabits per second. All command and configuration information is sent via the FireWire port.

Table 2-6: FireWire Card Part Numbers

Part Number	Description
NFIRE-PCI	OHCI compliant FireWire PCI interface card, 3 port
NFIRE-PCIE	OHCI compliant FireWire PCIe x1 interface card, 2 port
NFIRE-PCI-TI-LP	Low Profile, OHCI compliant, PCI
NFIRE-PCIE-GOF	FireWire PCIe X1 Glass Optical Fiber Board

Table 2-7: FireWire Repeaters (for cables exceeding 4.5 m (15 ft) specification)

Part Number	Description
NFIRE-RPTR-1394A-1394A	Extender for copper cable lengths greater than 4.5 m (15 feet).
NFIRE-RPTR-1394A-GOF	Glass Optical Fiber FireWire Repeater, Qty. 1 (Fiber Cable not included)

Table 2-8: FireWire Cables (copper and glass fiber)

Part Number	Description
NCONNECT-60	6 m (20 ft) long, 6 pin to 6 pin
NCONNECT-45	4.5 m (15 ft) long, 6 pin to 6 pin
NCONNECT-30	3 m (10 ft) long, 6 pin to 6 pin
NCONNECT-15	1.5 m (5 ft) long, 6 pin to 6 pin
NCONNECT-9	0.9 m (3 ft) long, 6 pin to 6 pin
NCONNECT-10000-GOF	10 m (32.8 ft), glass fiber optical cable
NCONNECT-15000-GOF	15 m (49.2 ft), glass fiber optical cable
NCONNECT-20000-GOF	20 m (65.6 ft), glass fiber optical cable
NCONNECT-30000-GOF	30 m (101.7 ft), glass fiber optical cable

2.4. Motor and Feedback Connections (J201)

The Ndrive FCL is only capable of controlling a DC Brush motor.

The Motor and Feedback connector (a 25-pin, D-style connector) has an analog encoder input, 5 volt encoder power, and motor connections.

Table 2-9: Motor and Feedback Connector Pinout (J201)

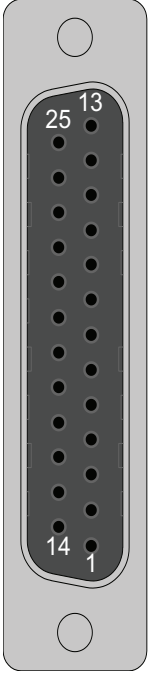
Pin	Description	In/Out/Bi	Pin Location
1	Sine +	Input	
2	Cosine +	Input	
3	Encoder Ground	N/A	
4	Reserved	--	
5	Reserved	--	
6	Reserved	--	
7	Marker +	Input	
8	Encoder Power (+5V)	N/A	
9	Reserved	--	
10	Flash Configuration	Input	
11	Shield	N/A	
12	Motor +	Output	
13	Motor +	Output	
14	Sine -	Input	
15	Cosine -	Input	
16	Encoder Ground	N/A	
17	Reserved	--	
18	Reserved	--	
19	Reserved	--	
20	Marker -	Input	
21	Encoder Ground	N/A	
22	Reserved	--	
23	Shield	N/A	
24	Motor -	Output	
25	Motor -	Output	

Table 2-10: 25-Pin D-Style Mating Connector Specifications for J201

Mating Connector	Aerotech P/N	Third Party P/N
25-Pin D-Connector	ECK00101	FCI DB25P064TXLF
Backshell	ECK00656	Amphenol 17E-1726-2

2.4.1. Analog Encoder Inputs (J201)

The Ndrive FCL will accept an analog encoder input signal. The multiplication (interpolation) factor is determined by the EncoderMultiplicationFactor parameter.

The gain, offset, and phase balance of the analog Sine and Cosine encoder input signals can be adjusted by controller parameters. Encoder signals should be adjusted using the Feedback Tuning tab of the Digital Scope Utility.

Table 2-11: Analog Encoder Specifications

Specification	Value
Input Frequency (max)	500 kHz
Input Amplitude ⁽¹⁾	0.6 to 1.2 Vpk-Vpk
Interpolation Factor (fixed)	262,144

1. Any single-ended encoder signal measured with respect to ground.

2.5. Position Synchronized Output (PSO) (TB101)

The Ndrive FCL includes a Position Synchronized Output (PSO) feature.

The PSO can be programmed to generate an output synchronized to the feedback position and is typically used to fire a laser or sequence an external device. Trigger signals may be derived from a feedback channel or a software trigger. The position synchronized output pulse is generated using high-speed hardware, allowing minimal latency between the trigger condition and the output.

An RS-422 line receiver or opto-isolator is recommended, especially when using long cable lengths in noisy environments or when high frequency pulse transmission is required. It is best to locate the line receiver or opto-isolator close to the receiving electronics.

Table 2-12: PSO Specifications

Specification		Value
Maximum Input Tracking Rate ⁽¹⁾	Single-Axis Tracking	16.6 MHz
	Dual-Axis Tracking	15 MHz
Maximum Quadrature Encoder Output Frequency	-MXH Feedback	30 MHz
Maximum PSO Output (Fire) Frequency ⁽²⁾	with Differential Output	5 MHz
	with Single-Ended Output	12.5 MHz
Firing Latency	Single-Axis Tracking	80 nsec
	Dual-Axis Tracking	110 nsec
1. Signals in excess of this rate will cause a loss of PSO accuracy. 2. The optocoupler that you use on the output might have an effect on this rate.		

Table 2-13: PSO Pins on the TB101 A Connector

Pin	Description	In/Out/Bi
1	PSO Output -	Output
2	PSO Output +	Output

Table 2-14: PSO Pins on the TB101 B Connector

Pin	Description	In/Out/Bi
1	PSO Output	Output

2.6. Encoder Input (TB103 A/B)

The Ndrive FCL is equipped with two auxiliary encoder input channels that are accessible through TB103A/B. The encoder interfaces accept an RS-422 differential line driver.

The auxiliary encoder input channels cannot be used for closing the position loop. They are intended to be used with the Infinite Field of View and the Marking on the Fly functionality of the Ndrive FCL.

Table 2-15: Encoder Input Specifications (TB103)

Specification	Value
Encoder Frequency	10 MHz maximum (25 nsec minimum edge separation)
x4 Quadrature Decoding	40 million counts/sec

Table 2-16: Encoder Input Connector Pinout (TB103 A)

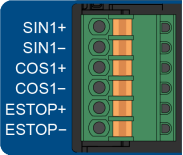
Pin	Label	Description	In/Out/Bi	Connector
1	SIN1+	Encoder SIN+ Input	Input	
2	SIN1-	Encoder SIN- Input	Input	
3	COS1+	Encoder COS+ Input	Input	
4	COS1-	Encoder COS- Input	Input	
5	ESTOP+	Emergency Stop Digital Input +	Input	
6	ESTOP-	Emergency Stop Digital Input -	Input	

Table 2-17: Encoder Input Connector Pinout (TB103 B)

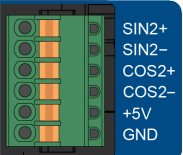
Pin	Label	Description	In/Out/Bi	Connector
1	--	Reserved	Input	
2	--	Reserved	Input	
3	--	Reserved	Input	
4	--	Reserved	Input	
5	+5V	+5V Encoder Power	Output	
6	GND	Ground	--	

Table 2-18: 6-Pin Terminal Block Mating Connector Specifications for TB103 A/B

Type	Aerotech P/N	Phoenix P/N	Wire Size: mm ² [AWG]
6-Pin Terminal Block	ECK02220	1881367	0.5 - 0.080 [20-28]

Table 2-19: Cable Part Numbers

Drive Type	Cable P/N
Ndrive CP, HPe, or HLe	C25481-xx
Ndrive MP	C25483-xx
Npaq	C25482-xx

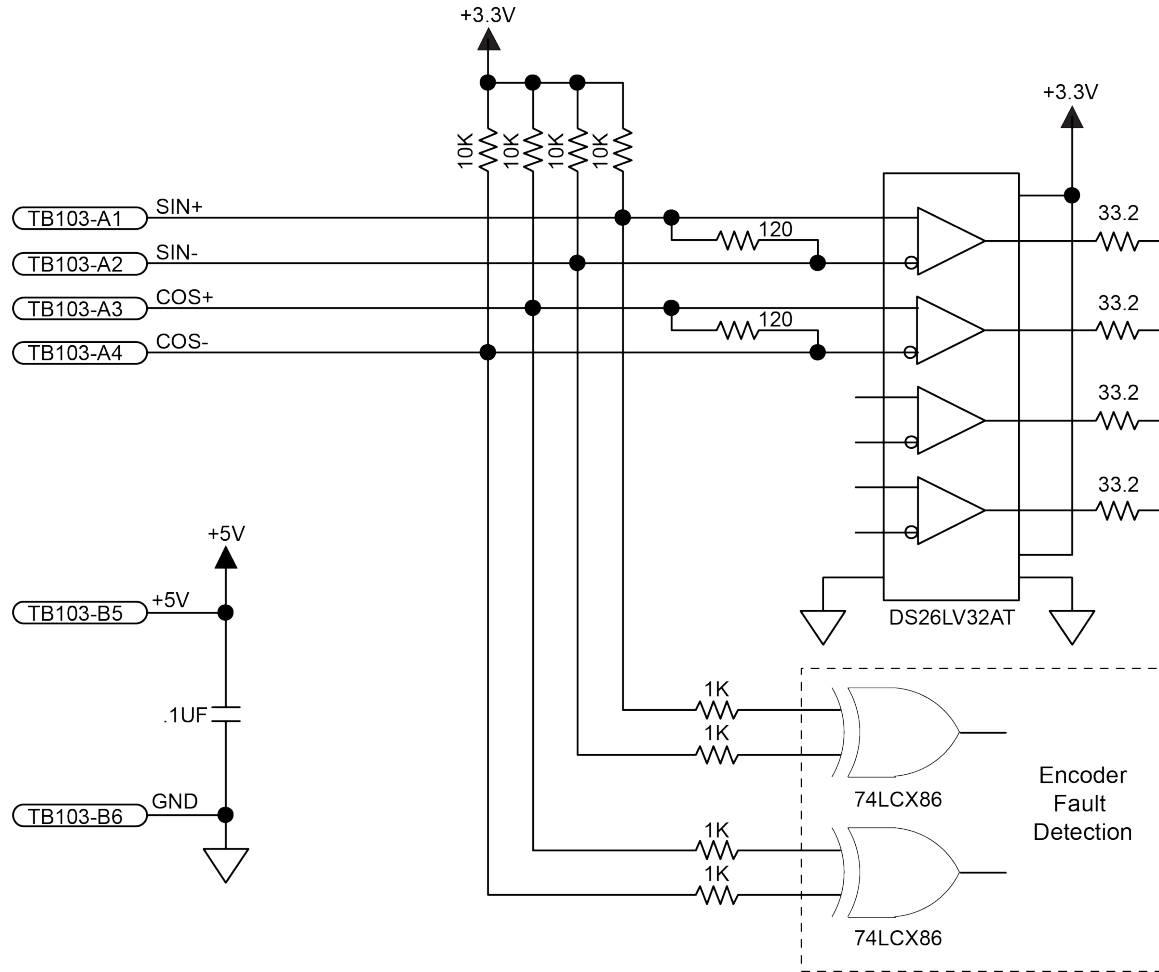


Figure 2-5: Encoder Connections (TB103 A/B)

2.6.1. Emergency Stop Sense Input

The ESTOP sense input is used to monitor the state of an external safety circuit only. This state is indicated by the software and may be used to facilitate system restart. This ESTOP sense input is not intended to be a complete safety system.



WARNING: The user is responsible for assessing operator risk levels and designing the external safety circuits appropriately.

The ESTOP input is scaled for an input voltage of 5-24 volts.

If the ESTOP bit is enabled in the FaultMask axis parameter, the ESTOP input must be driven to prevent the ESTOP fault condition.

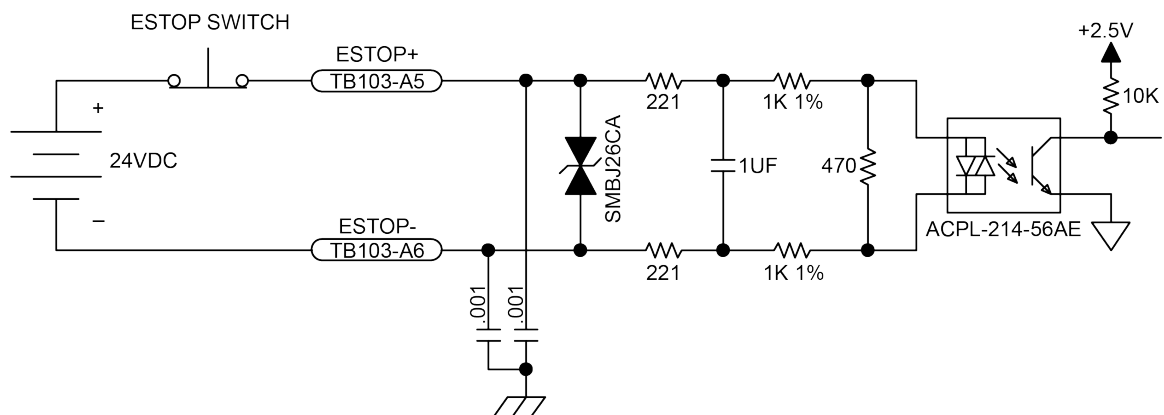


Figure 2-6: Emergency Stop Sense Input

Table 2-20: ESTOP Pins on the Encoder Input TB103 A Connector

Pin #	Label	Description	In/Out/Bi
5	ESTOP+	Emergency Stop Digital Input +	Input
6	ESTOP-	Emergency Stop Digital Input -	Input

NOTE: Connecting the ESTOP input to a relay or other noise producing device requires the use of noise suppression devices such as those in Table 2-21. These devices are applied across the switched coil to suppress transient voltages.

Table 2-21: Electrical Noise Suppression Devices

Device	Aerotech P/N	Third Party P/N
RC (.1uf / 200 ohm) Network	EIC00240	Electrocube RG1782-8
Varistor	EID00160	Littelfuse V250LA40A

2.7. Encoder Output (J103)

The Encoder Output interface is used to echo the encoder signals from both axes.

Table 2-22: Encoder Output Connector Pinout (J103)

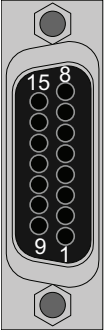
Pin	Description	In/Out/Bi	Connector
1	SIN-	Output	
2	Reserved	--	
3	COS-	Output	
4	Reserved	--	
5	Reserved	--	
6	Reserved	--	
7	PSO External Sync	Input	
8	+5V	Output	
9	SIN+	Output	
10	Reserved	--	
11	COS+	Output	
12	Reserved	--	
13	Reserved	--	
14	Reserved	--	
15	Ground	--	

Table 2-23: 15-Pin D-Style Mating Connector Specifications for J103

Mating Connector	Aerotech P/N	3rd Party P/N
Backshell	ECK01022	Amphenol 17E-1725-2
Connector	ECK00326	Amphenol DA15S064TLF

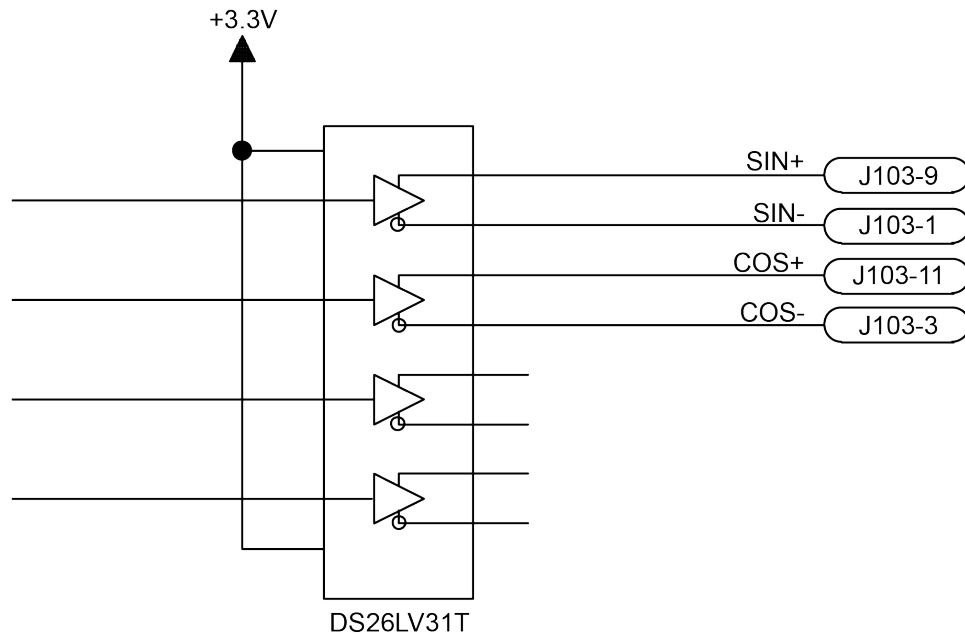


Figure 2-7: Encoder Outputs

Table 2-24: PSO External Sync Specifications

Specification	Value
Voltage	3.3 VDC
Frequency	25 MHz Maximum
On Time	20 ns Minimum

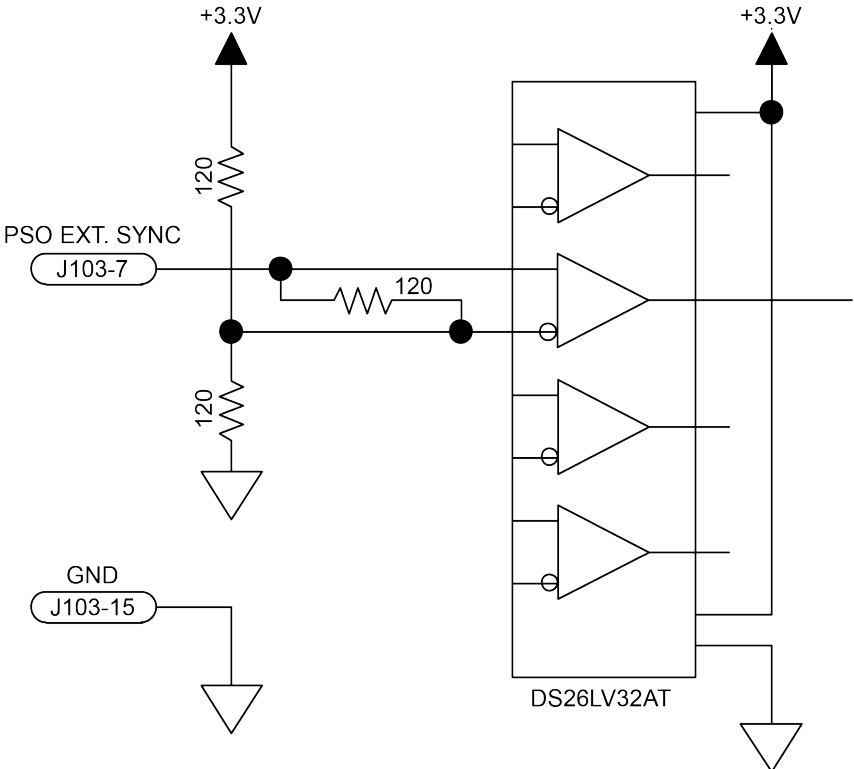


Figure 2-8: PSO External Sync Input

2.8. Digital and Analog I/O

This connector has four digital, optically-isolated outputs, four digital, optically-isolated inputs, one differential analog input, and two analog outputs.

Table 2-25: Digital Outputs and Differential Analog Inputs Pinout (TB102 A)

Pin #	Label	Description	In/Out/Bi	Connector
1	DO0	Digital Output 0 (Optically-Isolated)	Output	
2	DO1	Digital Output 1 (Optically-Isolated)	Output	
3	DO2	Digital Output 2 (Optically-Isolated)	Output	
4	DO3	Digital Output 3 (Optically-Isolated)	Output	
5	DOC	Digital Output Common	Input	
6	AI+	Analog Input +	Input	
7	AI-	Analog Input -	Input	
8	GND	Ground	--	

Table 2-26: Digital Inputs and Analog Outputs Pinout (TB102 B)

Pin #	Label	Description	In/Out/Bi	Connector
1	DI0	Digital Input 0 (Optically-Isolated)	Input	
2	DI1	Digital Input 1 (Optically-Isolated)	Input	
3	DI2	Digital Input 2 (Optically-Isolated)	Input	
4	DI3	Digital Input 3 (Optically-Isolated)	Input	
5	DIC	Digital Input Common	Input	
6	AO0	Analog Output 0	Output	
7	AO1	Analog Output 1	Output	
8	+5V	+5V	Input	

Table 2-27: 8-Pin Terminal Block Mating Connector Specifications for TB102 A/B

Mating Connector	Aerotech P/N	Phoenix P/N	Wire Size: mm ² [AWG]
8-Pin Terminal Block	ECK01386	1881383	0.5 - 0.080 [20-28]

2.8.1. Digital Inputs (TB102 B)

The digital inputs are opto-isolated and may be connected to current sourcing or current sinking devices, as shown in [Figure 2-9](#) and [Figure 2-10](#). These inputs are designed to connect to other ground-referenced circuits and are not intended for high-voltage isolation.

The opto-isolator's common connections can be directly connected to the drive's power supply; however, doing so will effectively defeat the isolation and will reduce noise immunity.

Table 2-28: Digital Input Specifications

Input Voltage	Approximate Input Current	Turn On Time	Turn Off Time
+5 V to +24 V	5 mA	4 usec	1500 usec

Table 2-29: Digital Inputs Pins on the TB102 B Connector

Pin #	Label	Description	In/Out/Bi
1	DI0	Digital Input 0 (Optically-Isolated)	Input
2	DI1	Digital Input 1 (Optically-Isolated)	Input
3	DI2	Digital Input 2 (Optically-Isolated)	Input
4	DI3	Digital Input 3 (Optically-Isolated)	Input
5	DIC	Digital Input Common	Input

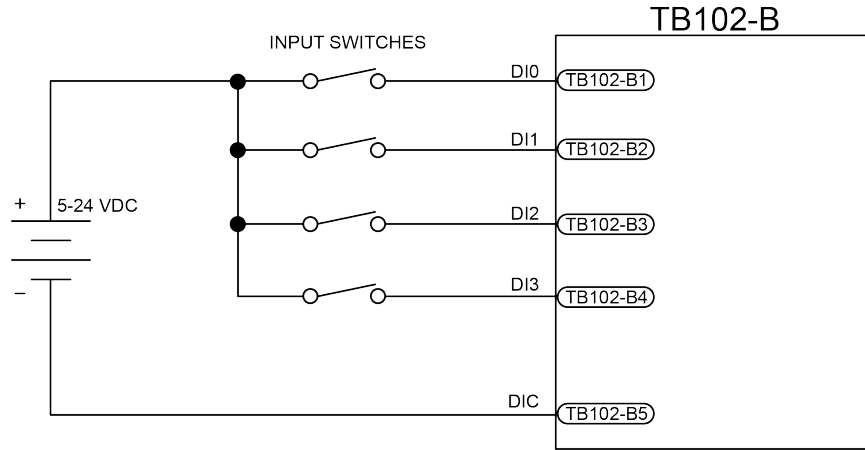


Figure 2-9: Inputs Connected to a Current Sourcing Device

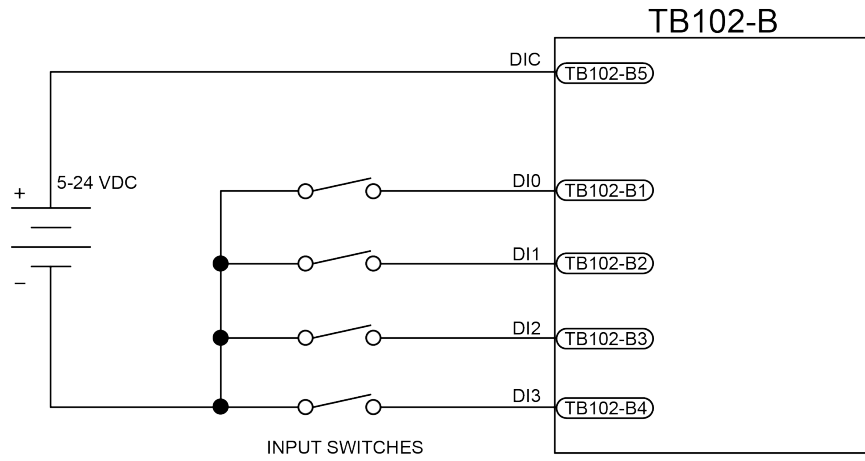


Figure 2-10: Inputs Connected to a Current Sinking Device

2.8.2. Digital Outputs (TB102 A)

The digital outputs are optically-isolated and may be connected in sourcing or sinking configurations. The digital outputs are designed to connect to other ground referenced circuits and are not intended to provide high-voltage isolation.

Outputs must be connected in either all sinking or all sourcing mode. [Figure 2-11](#) and [Figure 2-12](#) illustrate how to connect to an output in current sinking and current sourcing mode, respectively.

The opto-isolator's common connections can be directly connected to the drive's power supply; however, doing so will effectively defeat the isolation and will reduce noise immunity.

NOTE: The outputs are protected by resettable thermal fuses. If there is an overload, removing the overload will reset the fuse.

Table 2-30: Digital Output Pins on the TB102 A Connector

Pin #	Label	Description	In/Out/BI
1	DO0	Digital Output 0 (Optically-Isolated)	Output
2	DO1	Digital Output 1 (Optically-Isolated)	Output
3	DO2	Digital Output 2 (Optically-Isolated)	Output
4	DO3	Digital Output 3 (Optically-Isolated)	Output
5	DOC	Digital Output Common	Input

Table 2-31: Digital Output Specifications

Opto Device Specifications	Value
Maximum Voltage	24 V Maximum
Maximum Sink/Source Current	50 mA/output
Output Saturation Voltage	0.3 V at maximum current
Rise / Fall Time	250 usec (2K pull up to 24V)
Reset State	Output Off (High Impedance State)

Suppression diodes must be installed on outputs driving relays or other inductive devices. This protects the outputs from damage caused by inductive spikes. Suppressor diodes, such as the 1N914, can be installed on all outputs to provide protection. It is important that the diode be installed correctly (normally reversed biased). Refer to [Figure 2-12](#) for an example of a current sinking output with diode suppression and [Figure 2-11](#) for an example of a current sourcing output with diode suppression.

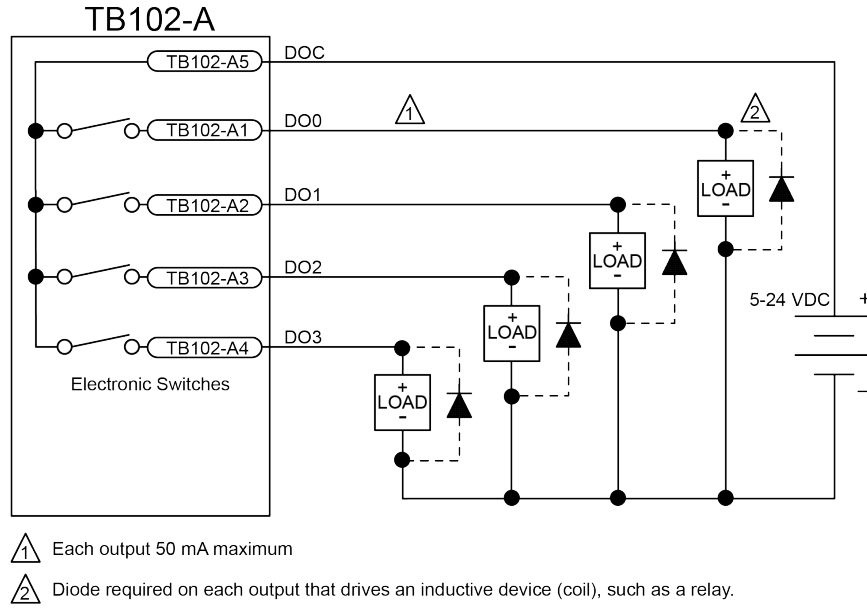


Figure 2-11: Outputs Connected in Current Sourcing Mode

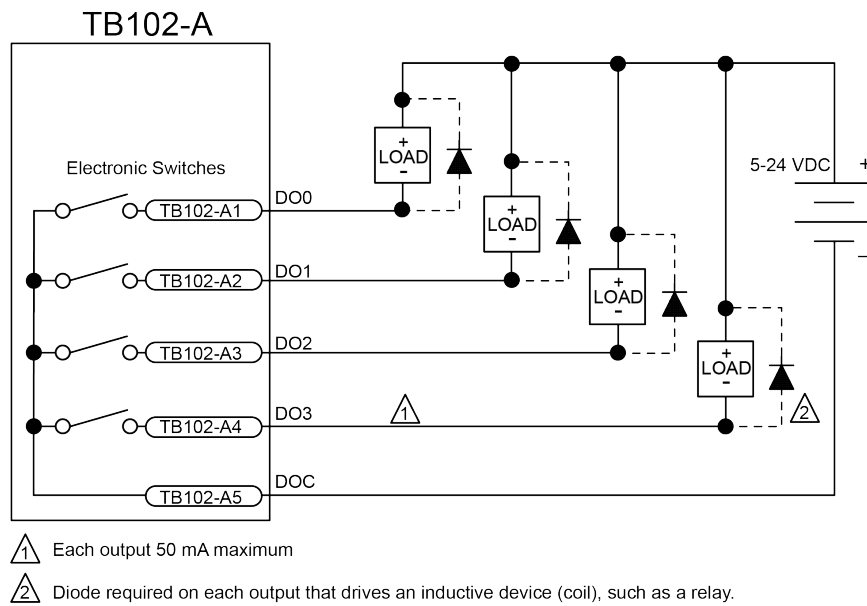


Figure 2-12: Outputs Connected in Current Sinking Mode

2.8.3. Differential Analog Input

To interface to a single-ended (non-differential) voltage source, connect the signal common of the source to the negative input and the analog source signal to the positive input. A floating signal source should be referenced to the analog common as shown in Figure 2-13.

Table 2-32: Analog Input Pins on the TB102 A Connector

Pin #	Label	Description	In/Out/Bi
6	AI+	Analog Input +	Input
7	AI-	Analog Input -	Input
8	GND	Ground	--

Table 2-33: Differential Analog Input Specifications

Specification	Value
(AI+) - (AI-)	+10 V to -10 V ⁽¹⁾
Resolution (bits)	16 bits
Resolution (volts)	305 μ V

1. Signals outside of this range may damage the input

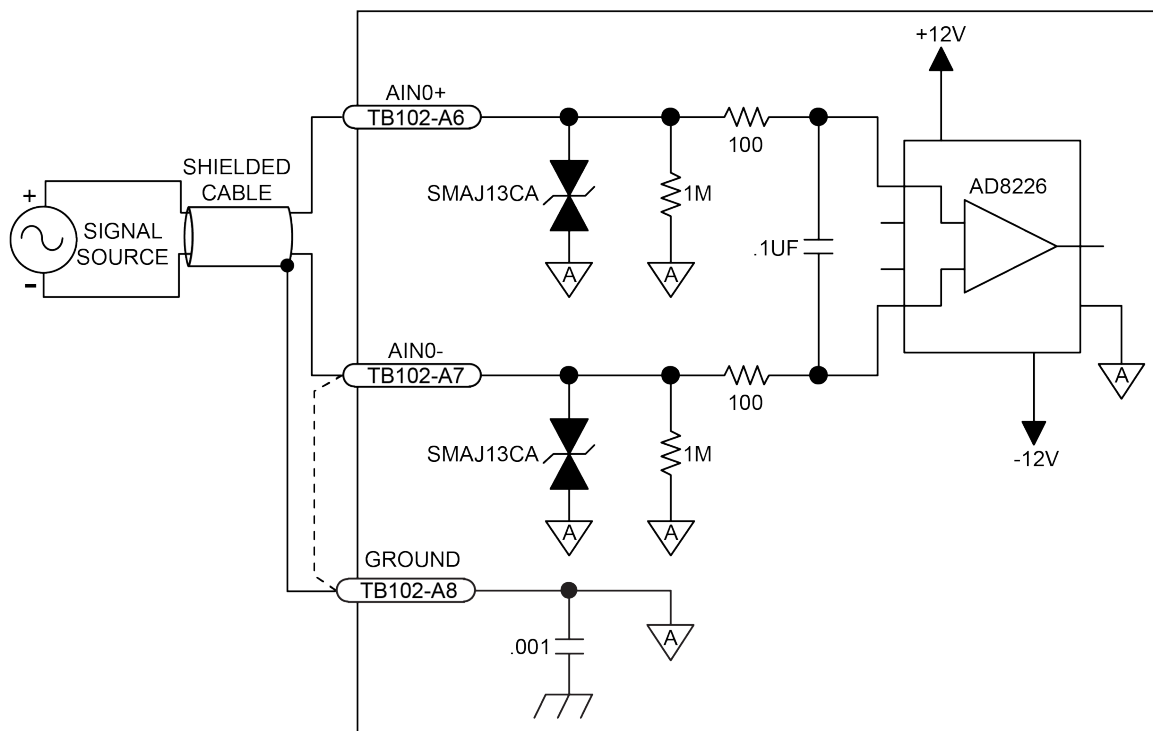


Figure 2-13: Analog Inputs (TB102)

2.8.4. Analog Outputs (TB102 B)

The analog output is set to zero when power is first applied to the system or during a system reset.

Table 2-34: Analog Output Pins on the TB102 B Connector

Pin #	Label	Description	In/Out/Bi
6	AO0	Analog Output 0	Output
7	AO1	Analog Output 1	Output

Table 2-35: Analog Output Specifications

Specification	Value
Output Voltage	-10 V to +10 V
Output Current	5 mA
Resolution (bits)	16 bits
Resolution (volts)	305 μ V

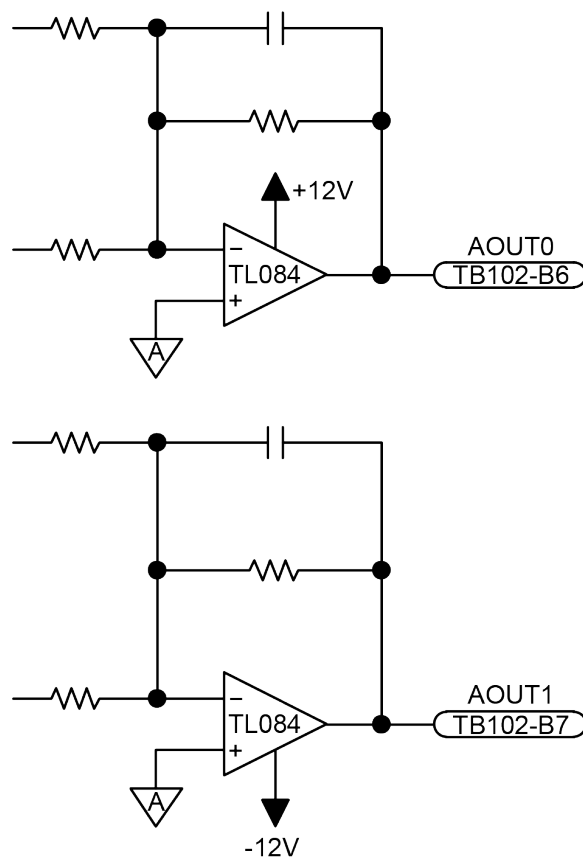


Figure 2-14: Analog Outputs (TB102 B)

2.9. Laser Output Polarity

The Laser Output Polarity switches are reserved for future use.

2.10. PC Configuration and Operation Information

For additional information about Ndrive FCL and PC configuration, hardware requirements, programming, utilities and system operation refer to the A3200 Help file.

Chapter 3: Maintenance



DANGER: Always disconnect the Mains power connection before opening the Ndrive FCL chassis.



DANGER: Before performing any tests, be aware of lethal voltages inside the controller and at the input and output power connections. A qualified service technician or electrician should perform these tests.

Table 3-1: LED Description

LED	Description
PWR*	Turns green when power is applied.
STAT	Turns red to indicate when the PSO output is on.

* If the power light flashes continuously and the unit does not operate, there is too much current draw from the 5V power supply or the control supply voltage level is low.

3.1. Preventative Maintenance

The Ndrive FCL and external wiring should be inspected monthly. Inspections may be required at more frequent intervals, depending on the environment and use of the system.



DANGER: Always disconnect the Mains power connection before opening the Ndrive FCL chassis.

Table 3-2: Preventative Maintenance

Check	Action to be Taken
Visually Check chassis for loose or damaged parts / hardware. Note: Internal inspection is not required.	Parts should be repaired as required. If internal damage is suspected, these parts should be checked and repairs made if necessary.
Inspect cooling vents.	Remove any accumulated material from vents.
Check for fluids or electrically conductive material exposure.	Any fluids or electrically conductive material must not be permitted to enter the Ndrive FCL.
Visually inspect all cables and connections.	Tighten or re-secure any loose connections. Replace worn or frayed cables. Replace broken connectors.

Cleaning

The Ndrive FCL chassis can be wiped with a clean, dry, soft cloth. The cloth may be slightly moistened if required with water or isopropyl alcohol to aid in cleaning if necessary. In this case, be careful not to allow moisture to enter the Ndrive FCL or onto exposed connectors / components. Fluids and sprays are not recommended because of the chance for internal contamination, which may result in electrical shorts and/or corrosion. The electrical power must be disconnected from the Ndrive FCL while cleaning. Do not allow cleaning substances or other fluids to enter the Ndrive FCL or to get on to any of the connectors. Avoid cleaning labels to prevent removing the label information.

3.2. Board Assembly



DANGER: Always disconnect the Mains power connection before opening the Ndrive FCL chassis.

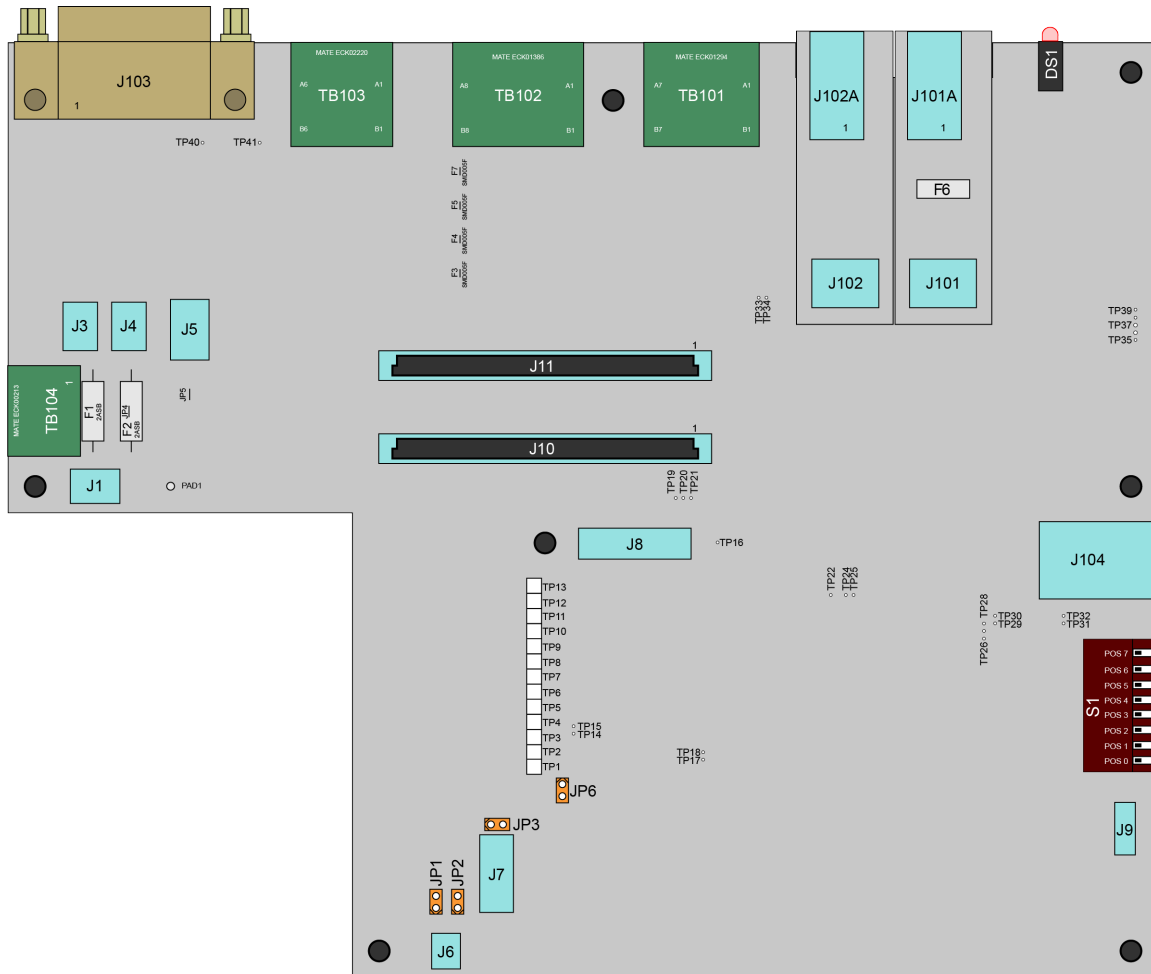


Figure 3-1: Control Board Assembly

Table 3-3: Control Board Fuse Specifications

Fuse	Description	Size	Aerotech P/N	Manufacturer's P/N
F1	Control Power at TB109-1	2 A S.B.	EIF01048	Littelfuse 0875002.MXEP
F2	Control Power at TB109-1	2 A S.B.	EIF01048	Littelfuse 0875002.MXEP
F6	FireWire power at J101-J102	--	--	-

NOTE: F6 is a resettable fuse (turn off power and remove the short. F6 does not require replacement.



DANGER: Always disconnect the Mains power connection before opening the Ndrive FCL chassis.

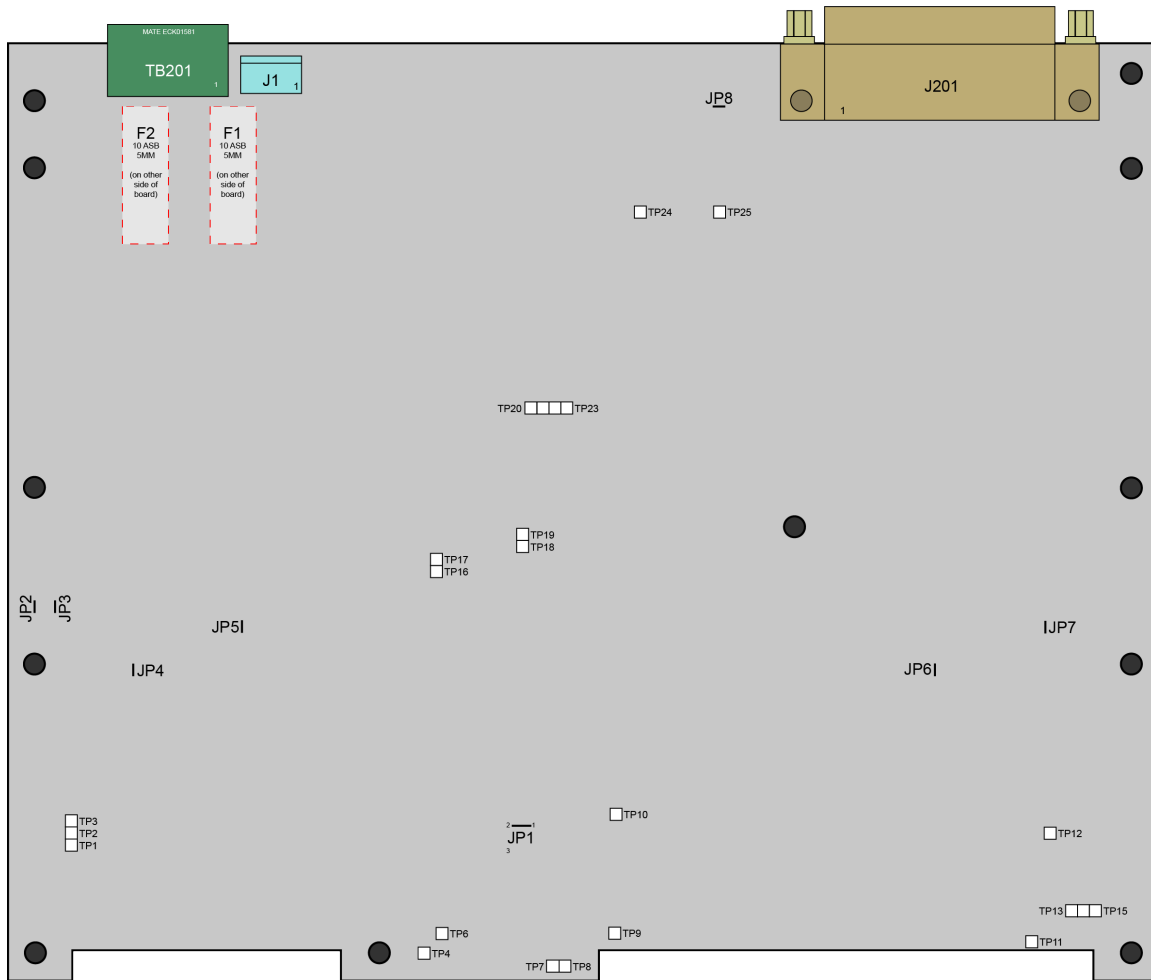


Figure 3-2: Power Board Assembly

Table 3-4: Power Board Fuses

Fuse	Description	Size	Aerotech P/N	Manufacturer's P/N
F1	Motor Bus Supply	10 A S.B.	EF01020	Littelfuse 215010.P
F2	Motor Bus Supply	10 A S.B.	EF01020	Littelfuse 215010.P

NOTE: F1 and F2 are located on the bottom of the board.

Appendix A: Warranty and Field Service

Aerotech, Inc. warrants its products to be free from harmful defects caused by faulty materials or poor workmanship for a minimum period of one year from date of shipment from Aerotech. Aerotech's liability is limited to replacing, repairing or issuing credit, at its option, for any products that are returned by the original purchaser during the warranty period. Aerotech makes no warranty that its products are fit for the use or purpose to which they may be put by the buyer, whether or not such use or purpose has been disclosed to Aerotech in specifications or drawings previously or subsequently provided, or whether or not Aerotech's products are specifically designed and/or manufactured for buyer's use or purpose. Aerotech's liability on any claim for loss or damage arising out of the sale, resale, or use of any of its products shall in no event exceed the selling price of the unit.

THE EXPRESS WARRANTY SET FORTH HEREIN IS IN LIEU OF AND EXCLUDES ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, BY OPERATION OF LAW OR OTHERWISE. IN NO EVENT SHALL AEROTECH BE LIABLE FOR CONSEQUENTIAL OR SPECIAL DAMAGES.

Return Products Procedure

Claims for shipment damage (evident or concealed) must be filed with the carrier by the buyer. Aerotech must be notified within thirty (30) days of shipment of incorrect material. No product may be returned, whether in warranty or out of warranty, without first obtaining approval from Aerotech. No credit will be given nor repairs made for products returned without such approval. A "Return Materials Authorization (RMA)" number must accompany any returned product(s). The RMA number may be obtained by calling an Aerotech service center or by submitting the appropriate request available on our website (www.aerotech.com). Products must be returned, prepaid, to an Aerotech service center (no C.O.D. or Collect Freight accepted). The status of any product returned later than thirty (30) days after the issuance of a return authorization number will be subject to review.

Visit <https://www.aerotech.com/global-technical-support.aspx> for the location of your nearest Aerotech Service center.

Returned Product Warranty Determination

After Aerotech's examination, warranty or out-of-warranty status will be determined. If upon Aerotech's examination a warranted defect exists, then the product(s) will be repaired at no charge and shipped, prepaid, back to the buyer. If the buyer desires an expedited method of return, the product(s) will be shipped collect. Warranty repairs do not extend the original warranty period.

Fixed Fee Repairs - Products having fixed-fee pricing will require a valid purchase order or credit card particulars before any service work can begin.

All Other Repairs - After Aerotech's evaluation, the buyer shall be notified of the repair cost. At such time the buyer must issue a valid purchase order to cover the cost of the repair and freight, or authorize the product(s) to be shipped back as is, at the buyer's expense. Failure to obtain a purchase order number or approval within thirty (30) days of notification will result in the product(s) being returned as is, at the buyer's expense.

Repair work is warranted for ninety (90) days from date of shipment. Replacement components are warranted for one year from date of shipment.

Rush Service

At times, the buyer may desire to expedite a repair. Regardless of warranty or out-of-warranty status, the buyer must issue a valid purchase order to cover the added rush service cost. Rush service is subject to Aerotech's approval.

On-site Warranty Repair

If an Aerotech product cannot be made functional by telephone assistance or by sending and having the customer install replacement parts, and cannot be returned to the Aerotech service center for repair, and if Aerotech determines the problem could be warranty-related, then the following policy applies:

Aerotech will provide an on-site Field Service Representative in a reasonable amount of time, provided that the customer issues a valid purchase order to Aerotech covering all transportation and subsistence costs. For warranty field repairs, the customer will not be charged for the cost of labor and material. If service is rendered at times other than normal work periods, then special rates apply.

If during the on-site repair it is determined the problem is not warranty related, then the terms and conditions stated in the following "On-Site Non-Warranty Repair" section apply.

On-site Non-Warranty Repair

If any Aerotech product cannot be made functional by telephone assistance or purchased replacement parts, and cannot be returned to the Aerotech service center for repair, then the following field service policy applies:

Aerotech will provide an on-site Field Service Representative in a reasonable amount of time, provided that the customer issues a valid purchase order to Aerotech covering all transportation and subsistence costs and the prevailing labor cost, including travel time, necessary to complete the repair.

Service Locations

<http://www.aerotech.com/contact-sales.aspx?mapState=showMap>

USA, CANADA, MEXICO	CHINA	GERMANY
Aerotech, Inc. Global Headquarters Phone: +1-412-967-6440 Fax: +1-412-967-6870	Aerotech China Full-Service Subsidiary Phone: +86 (21) 5508 6731	Aerotech Germany Full-Service Subsidiary Phone: +49 (0)911 967 9370 Fax: +49 (0)911 967 93720
JAPAN	TAIWAN	UNITED KINGDOM
Aerotech Japan Full-Service Subsidiary Phone: +81 (0)50 5830 6814 Fax: +81 (0)43 306 3773	Aerotech Taiwan Full-Service Subsidiary Phone: +886 (0)2 8751 6690	Aerotech United Kingdom Full-Service Subsidiary Phone: +44 (0)1256 855055 Fax: +44 (0)1256 855649

Have your customer order number ready before calling.

Appendix B: Revision History

Revision	Description
1.02.00	Added a new table: <ul style="list-style-type: none">• Table 2-24
1.01.00	Updates have been made to: <ul style="list-style-type: none">• EU Declaration of Conformity
1.00.00	New Manual

This page intentionally left blank.

Index

	2		FireWire Card Part Numbers	25
2014/35/EU		7	FireWire Interface	25
	A		FireWire Repeaters	25
Altitude		17	Functional Diagram	14
Ambient Temperature		17		
Analog Encoder Inputs		27	G	
Analog Encoder Specifications		27	Global Technical Support	2
	C			
Check chassis for loose or damaged parts / hardware		44	H	
Check for fluids or electrically conductive material exposure		44	Humidity	17
Cleaning		44		
Communication Channel Settings		19	I	
Control Supply Connections		20	Inputs Connected to a Current Sinking Device	36
Control Supply Input Wiring (TB109)		20	Inputs Connected to a Current Sourcing Device	36
Control Supply Mating Connector (TB109)		20	inspect all cables and connections	44
	D		Inspect cooling vents	44
Declaration of Conformity		7	Inspection	44
Device Number		19	Installation and Configuration	19
Digital Input Specifications		35	Introduction	13
dimensions		16		
Drive and Software Compatibility		18	J	
	E		J201	26-27
Electrical Specifications		15		
Encoder Inputs		27	L	
Encoder Specifications		27	Laser Output Polarity	41
Environmental Specifications		17		
	F		M	
Feature Summary		13	Mechanical Design	16
Feedback Connections		26	Motor and Feedback Connections	26
FireWire Cables		25	Motor Supply Connections	21
			O	
			Overview	13
			P	
			Pollution	17
			Position Synchronized Output	28
			Power Connections	20
			Preventative Maintenance	44
			PSO	28

PSO External Sync Specifications	33
PSO Output Sources	28
Q	
Quick Installation Guide	11
Quick Start Connections	11
R	
Revision History	49
S	
Standard Features	13
Support	2
T	
TB103	29
TB104	20
TB109	20
TB201	21
Technical Support	2
U	
unit weight	16
Use	17